





User Manual For 0.57 Cubic Ft. Depository Safe

WARNING: Avoid leaving door open and unattended; it will allow unauthorized individuals to reprogram the safe, gaining full access to the safe and contents.

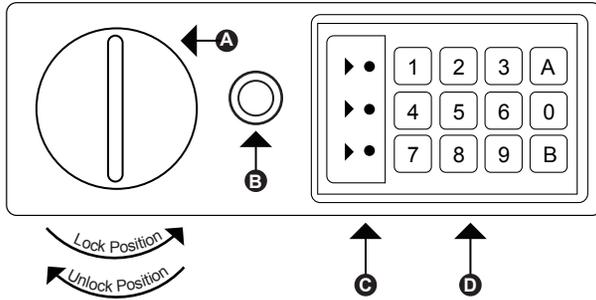

Parts of the Control Panel

- A. Lock Knob
B. Key Cover and Key Access
C. Indicator Lights
D. Keypad

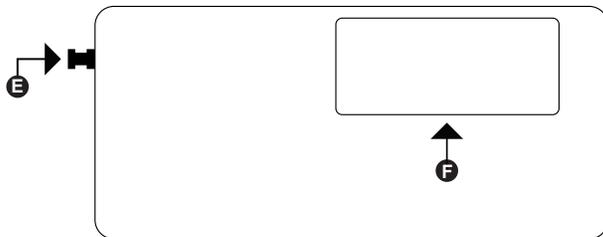

Parts of the Inside of the Safe Door

- E. Initialization Button
F. Battery Compartment

Note: All information, feature, and specification displayed herein are based on the data available at the time of publishing, thus they are subject to change without notice. All product pictures displayed herein are for illustration purposes only. The actual product may vary due to different circumstances.

OPENING SAFE WITH ACCESS KEY

1. To expose the key access, lift off the key cover.
2. Insert emergency key into key access and turn key counter-clockwise. Hold the key to open position and turn the knob clockwise to open the door.

NOTE: Store keys in a secure place. NOT inside of the safe

BATTERIES

1. Remove battery cover on the inside of the safe door
2. Insert 4 new AA batteries into the battery compartment and pay attention to the polarity of the batteries
3. Replace compartment cover

PIN CODE REGISTRATION

Safe retains TWO 3-8 digit pin codes

1st Personal Pin Code

1. With safe open, press and release the initialization button located on the inside of the safe door. Yellow indicator light will be on.
2. On the keypad input 3-8 digit new desired pin code and enter either "A" or "B" to confirm. Yellow indicator light will turn off. Pin code registration is completed.

2nd Personal Pin Code

1. On the keypad press "0" twice, then press and release the initialization button located inside of the safe door. Yellow indicator light will be on.
2. On the keypad input 3-8 digit new desired pin code and enter either "A" or "B" to confirm. Yellow indicator light will turn off. Pin code registration is completed.

TEST REGISTERED PIN CODE

1. With safe door open, and the handle/lock knob in the lock position. Input 1st personal pin code and enter either "A" or "B" to confirm.

Successful Registration

- You will hear 2 short beeps
- The green indicator light will flash
- Turn the knob clockwise to retract bolts

Unsuccessful Registration

- You will hear 9 short beeps
- Handle will not move and bolts will stay extended
- Repeat steps PIN CODE REGISTRATION

2. To test 2nd personal pin code, input 2nd registered personal pin code and enter either "A" or "B" to confirm. See "Successful Registration" and "Unsuccessful Registration" above

3. Test a pin code that is not registered to make sure the safe cannot be unlocked to complete the registration process.

OPENING & CLOSING SAFE WITH PERSONAL PIN CODES

OPEN:

1. Input 3-8 registered pin code and enter either "A" or "B" to confirm.
2. Turn the lock knob to the unlock position and pull the safe door open

NOTE

After entering pin code, you have 5 seconds to turn the knob before the mechanism re-lock automatically.

CLOSE:

To close safe, close door and turn knob to the lock position

LOCK OUT

Lock out mode is activated when the wrong personal pin code is entered

- 3 consecutive times, Lock out mode will last 20 seconds
- 6 consecutive times, Lock out mode will last 5 minutes

CHANGING REGISTERED PIN CODE

Follow steps in "PIN CODE REGISTRATION "

LOW BATTERY WARNING

After entering correct personal pin code, the green and red indicator lights are flashing this indicates the batteries are low.

NOTE

Safe may still be opened in low battery state depending on battery voltage. If safe cannot be opened please use emergency key.

All registered pin codes remain stored

CARE AND MAINTENANCE

- If necessary use a damp cloth to clean the safe. DO NOT use chemicals or cleaning agents
- Keep liquids away from the control panel. Spills on the control panel will cause damage and possibly electric shock
- Secure safe in a proper area to prevent it from falling and causing damage or injury
- DO NOT over stuff the contents of the safe, it can damage the motor mechanism or the contents
- DO NOT disassemble the product. For all repairs and maintenance, contact BARSKA Customer Service
- DO NOT place emergency keys inside of safe

See reverse side for more information



1 YEAR LIMITED WARRANTY

SAFE/LOCK BOX

BARSKA warrants this new safe/lock box to be free of defects in material and/ or workmanship under normal use for a period of twelve (12) months from the date product is purchased. This limited warranty is delimited to repair or replacement only. This warranty does not cover damage caused by improper installation or maintenance. BARSKA disclaims all liability for incidental or consequential damages resulting from misuse, abuse, accident (such as dropping), fire, flood, service or repairs other than those performed by BARSKA, acts of nature, or arising out of any breach of this warranty. Altering the product under any circumstances will automatically void the warranty.

For service under this limited warranty, please have available the proof of purchase and the purchase date and location as well as a detailed description of the problem. This warranty is not transferable and only applies to the original purchaser with a proof of purchase from BARSKA or from an authorized dealer. This warranty applies only to products purchased within the United States, excluding Alaska, the Hawaiian Islands and all U.S. territories in the Caribbean and the Pacific.

BARSKA will examine and go through troubleshooting procedures, product repair or replacement of defective part(s) or units with new part(s) or provide a new unit, if necessary, during the warranty period. Reasonable shipping/handling charges may apply and are based on Barska sole discretion. Purchaser shall be required to prepay Shipping/handling charges with a check or money order to BARSKA at time product is returned. The Return Merchandise Authorization Number (RMA#) and shipping/handling charge MUST be obtained from BARSKA in advance of return. BARSKA shall not be liable for damages or loss occurring during shipping. Please visit via www.barska.com or call 909.445.8168 to obtain the RMA#, Shipping/handling amount, and for more information.

BARSKA reserves the right to modify or discontinue, without prior notice to the purchaser, any model or style of the product. BARSKA will determine, at its sole discretion, whether a product will be repaired or replaced. BARSKA reserves the right to discontinue or change any feature of its products at any time. If an exact replacement or product is not available, BARSKA reserves the right to provide a part or product that matches as closely as possible.

LIMITATION OF REMEDIES

BARSKA disclaims any warranties, express or implied, whether of merchantability or fitness for a particular use, except as expressly set forth herein. The sole obligation of BARSKA under this limited warranty shall be to repair or replace the covered product, in accordance with the terms set forth herein. BARSKA expressly disclaims any lost profits, general, special, indirect or consequential damages which may result from breach of any warranty, or arising out of the use or inability to use any BARSKA product. Any warranties which are implied and which cannot be disclaimed shall be limited in duration to a term of one year from the date of original retail purchase.

Some states do not allow the exclusion or limitation of incidental or consequential damages or limitation on how long an implied warranty lasts, so the above limitations and exclusions may not apply to you.

BARSKA
855 Towne Center Drive, Pomona, CA 91767

BC767