




## Keypad Depository Safe

Read all instructions before using this safe

### WARNING

- Safe can be opened by either Fingerprint, PIN code, and/or Emergency Keys.
- If user resets the safe to Factory Default mode: ANY fingerprint and Factory Default PIN code can open the safe.
- Register BOTH Fingerprint and PIN code to disable factory default mode.
- Register at least two different fingerprints and test a few times before closing the safe door.
- To improve fingerprint accuracy, please register the same finger 5 different times; please remove finger after each successful registration
- Test with a non-registered fingerprint. If the safe opens, the safe is still in Factory Default mode.
- Avoid leaving safe door open and unattended; it will allow unauthorized individuals to add their fingerprints and/or reprogram the safe, gaining full access to the safe and the contents.
- Test the Emergency Keys and store them in a secure place, NOT inside of the safe.
- To maximize the security and performance of the safe, test registered fingerprints every 6 months.
- Test and make sure the safe works properly before mounting.
- Mount the safe before use, the safe may tip forward if not properly mounted.
- Keep children away from safe; they should not play with or around the safe at anytime. Children at play could accidentally get locked inside the safe or accidentally pull on the safe door causing safe to tip over if not properly mounted.
- Failure to follow these warnings could result in serious injury or death.

Note: All information, feature, and specification displayed herein are based on the data available at the time of publishing, thus they are subject to change without notice. All product pictures displayed herein are for illustration purposes only. The actual product may vary due to different circumstances.

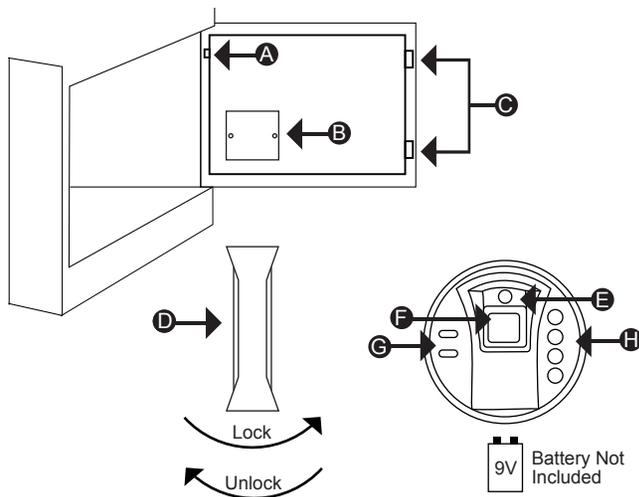

- A. Initialization Button
- B. Battery Compartment
- C. Bolts
- D. Handle
- E. Emergency Key Access
- F. Fingerprint Scanner
- G. Indicator Lights
- H. Key Pad

### Getting Started

1. Remove safe from packaging and remove Manual and all accessories that came with the safe.
2. Insert emergency key into key access and turn clockwise; move handle to unlock position and open the safe. Remove key and keep in a secure location.
3. Unscrew battery compartment and insert 4 AA batteries. Do not mix old and new batteries.
4. Press "0" on keypad to wake up the safe and place any finger on scanner. Few beeps will be heard and red flashes will be seen then safe will unlock, turn handle to unlocked position to open the door.

Note: Safe is in Factory Default Mode: ANY Fingerprint can open the safe.

### Fingerprint Registration

1. With safe open press and release initialization button located inside the safe and place desired finger on fingerprint scanner.

#### Successful Registration

2 beeps will be heard and 2 green flashes will be seen.

#### Unsuccessful Registration

2 quick beeps will be heard along with red flash.

Note: Register the same finger 5 times at slightly different angles to ensure reliable access to the safe.

### Test Registered Fingerprint

1. With Safe door open, turn handle to lock position extending the bolts out.
2. Press "0" to wake up safe and place Registered Fingerprint on the scanner. If green light is seen when safe can be unlocked then registration was successful. If safe opens but several beeps and red flash is seen then registration was unsuccessful. Follow steps under Fingerprint Registration to register your desired fingerprint.

### Pin Code Registration

1. Enter Current Pin Code (Default Pin Code: "12312312312"); Green lights will be seen, then press the "3" on keypad.
2. Enter new desired Pin Code between 4 – 11 digits and if Pin Code is between 4 – 10 digits, press initialization button on the back of the safe to finish. 1 long beep will be heard and green light will be seen.

Note: Pin Code CANNOT start with "0"

### Test Registered Pin Code

1. With Safe door open, turn handle to lock position extending the bolts out.
2. Enter Registered Pin Code, If safe unlocks then registration was successful. If safe does not unlock then registration was unsuccessful, please follow steps under Pin Code Registration to register your pin code.

### Close / Open Safe Door

#### Open Safe Door with Fingerprint

Press "0" on keypad to wake up the safe and place registered finger on scanner. Turn handle to unlocked position and open safe door.

#### Open Safe Door with Pin Code

Enter Registered Pin Code and turn handle to unlocked position to open safe door.

#### Closing Safe Door

Close door and turn handle to lock position to lock the safe.

See reverse side for more information

## Silent Mode

### Sound Off

Press and hold initialization button until 1 beep is heard along with green flash. Sound is now disabled.

Note: Door Open Alarm will not beep when safe is in silent mode, but green light will flash once every 4 seconds.

### Sound On

Press and hold initialization button until 1 beep is heard along with green flash.

## Resetting the Safe

Take all the batteries out of the safe, press and hold the initialization button inside the safe while re-inserting the batteries, keep holding initialization button until 3 beeps are heard and green flash is seen.

### Test Safe to See if it is Reset

With Fingerprint Press "0" on keypad and place any fingerprint on fingerprint scanner. Few beeps will be heard and red flashes will be seen, safe will unlock. Turn handle to unlocked position to open safe.

With Pin Code Press "12312312312" on keypad, beep will be heard and green flash will be seen, safe will unlock. Turn handle to unlocked position to open safe.

ANY fingerprint can now open the safe.  
Default Pin Code "12312312312"

## Low Battery Warning

An alarm sound and red flash will be seen when trying to access safe. Safe may allow access still, but batteries should be replaced as soon as possible.

Note: Can use 9v battery as an external power source. Place 9v battery under fingerprint module, touching the metal contacts under the fingerprint module. Safe should power up, if not switch the polarity of the 9v battery.

## Care and Maintenance

- To maximize the security and performance of the safe, keep Fingerprint Scanner clean; use a dry cloth to remove any smudges or prints off the Fingerprint Scanner after each use.

- Test registered fingerprints and PIN code every 6 months.

- Keep liquids away from the control panel. Spills on the control panel will cause damage and possibly electric shock.

- Secure safe in a proper area to prevent from falling and causing damage or injury.

- DO NOT disassemble the product. For all repairs, contact BARSKA Customer Service.

- DO NOT use chemicals or cleaning agents to clean the safe.

## Mounting Instructions

The safe may be mounted to a wall or floor. Be aware of the load bearing. Failure to do so can result in personal injury and/or damage to property. Use appropriate tools when performing work and always use eye protection.

### Wall Mounting

Do not mount the safe without anchoring to the wall.

- Find the studs in the wall, at your desired location. Most studs are 16 inches or 24 inches apart.

- Check the wall for concealed wires or pipes.

- Measure the location of the pre-set drill holes; mark their exact position onto the wall ensuring that the studs or anything else behind will not interfere.

- Drill the appropriate size holes for the anchors you are using.

- Carefully press the anchor into the holes at this time.

- Mount the safe by running screws from inside of the safe and securing to anchors; ensure the safe is mounted securely.

### Floor Mounting

- Use proper drill tools depending on the type of floor you are mounting the safe (wood, tile, or concrete).

- Measure the location of the pre-set drill holes; mark their exact position onto the floor.

- Drill the appropriate size holes for the anchors you are using.

- Carefully press the anchor into the holes at this time.

- Mount the safe by running screws from inside of the safe and securing to anchors; ensure the safe is mounted securely.



## 1 YEAR LIMITED WARRANTY

### SAFE/LOCK BOX

BARSKA warrants this new safe/lock box to be free of defects in material and/or workmanship under normal use for a period of twelve (12) months from the date product is purchased. This limited warranty is delimited to repair or replacement only. This warranty does not cover damage caused by improper installation or maintenance. BARSKA disclaims all liability for incidental or consequential damages resulting from misuse, abuse, accident (such as dropping), fire, flood, service or repairs other than those performed by BARSKA, acts of nature, or arising out of any breach of this warranty. Altering the product under any circumstances will automatically void the warranty.

For service under this limited warranty, please have available the proof of purchase and the purchase date and location as well as a detailed description of the problem. This warranty is not transferable and only applies to the original purchaser with a proof of purchase from BARSKA or from an authorized dealer. This warranty applies only to products purchased within the United States, excluding Alaska, the Hawaiian Islands and all U.S. territories in the Caribbean and the Pacific.

BARSKA will examine and go through troubleshooting procedures, product repair or replacement of defective part(s) or units with new part(s) or provide a new unit, if necessary, during the warranty period. Reasonable shipping/handling charges may apply and are based on Barska sole discretion. Purchaser shall be required to prepay Shipping/handling charges with a check or money order to BARSKA at time product is returned. The Return Merchandise Authorization Number (RMA#) and shipping/handling charge MUST be obtained from BARSKA in advance of return. BARSKA shall not be liable for damages or loss occurring during shipping. Please visit via [www.barska.com](http://www.barska.com) or call 909.445.8168 to obtain the RMA#, Shipping/handling amount, and for more information.

BARSKA reserves the right to modify or discontinue, without prior notice to the purchaser, any model or style of the product. BARSKA will determine, at its sole discretion, whether a product will be repaired or replaced. BARSKA reserves the right to discontinue or change any feature of its products at any time. If an exact replacement or product is not available, BARSKA reserves the right to provide a part or product that matches as closely as possible.

### LIMITATION OF REMEDIES

BARSKA disclaims any warranties, express or implied, whether of merchantability or fitness for a particular use, except as expressly set forth herein. The sole obligation of BARSKA under this limited warranty shall be to repair or replace the covered product, in accordance with the terms set forth herein. BARSKA expressly disclaims any lost profits, general, special, indirect or consequential damages which may result from breach of any warranty, or arising out of the use or inability to use any BARSKA product. Any warranties which are implied and which cannot be disclaimed shall be limited in duration to a term of one year from the date of original retail purchase.

Some states do not allow the exclusion or limitation of incidental or consequential damages or limitation on how long an implied warranty lasts, so the above limitations and exclusions may not apply to you.

BARSKA  
855 Towne Center Drive, Pomona, CA 91767