

 



User Manual for Key Safe


Read all instructions before using this safe.

WARNING

- Test registered pin code a few times before closing the safe door.
- Avoid leaving door open and unattended; it will allow unauthorized individuals to reprogram the safe, gaining full access to the safe and its contents.
- Store emergency keys in a secure place; NOT inside of the safe.
- To maximize security and performance of the safe, test pin code every 6 months.
- Test and make sure the safe works properly before mounting. Once tested, mount the safe before use.

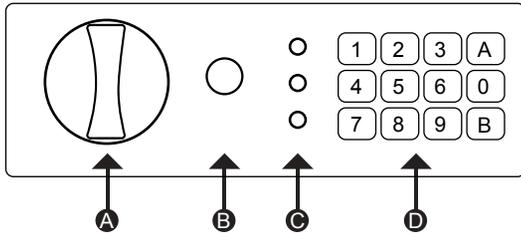

- A. Handle
- B. Key Access
- C. Indicator Lights
- D. Key Pad
- E. Key Drop Slot
- Located on the side of the safe

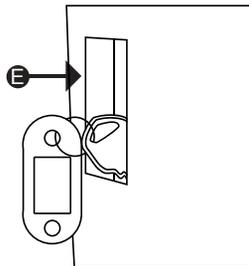

GETTING STARTED

Remove emergency keys and other included accessories from packaging.

KEY ACCESS

1. To expose the key access, gently lift off the key cover
2. Use emergency key and insert into key hole, turn key counter clockwise and turn handle clockwise.

BATTERY

Battery compartment is located on the inside of the door safe.

1. Remove battery compartment cover.
2. Insert four new AA alkaline batteries into the battery compartment and restore battery compartment cover.

Note: Do not mix new and old batteries

PIN CODE REGISTRATION

Safe retains only two 3-8 digit pin codes

1st Personal Pin Code

1. With safe open, press and release the initialization button located on the inside of the safe door. Yellow indicator light will be on.
2. On the key pad input your 3-8 digit pin code and press and release either "A" or "B" to confirm. Yellow indicator light will turn off.

2nd Personal Pin Code

1. On the keypad press "00" then press and release the initialization button located inside of the safe door. Yellow indicator light will be on.
2. On the keypad input your 3-8 digit pin code and press and release either "A" or "B" to confirm. Yellow indicator light will turn off.

TESTING REGISTERED PIN CODES

1. With safe door open, and the handle/lock knob in the lock position. Enter in 1st personal pin code on the key pad and press and release either "A" or "B" to confirm.

Successful Save

- You will hear 2 short beeps
- The green indicator light will flash
- Move handle to the right to retract bolts

Unsuccessful Save

- You will hear 3 short beeps
- Handle will not move and bolts will stay extended
- Repeat steps CREATING PERSONAL PIN CODES

2. To test 2nd personal pin code, enter in 2nd personal pin code on the key pad and press and release either "A" or "B" to confirm. See "Successful Save" and "Unsuccessful Save" above
3. Test a pin code that is not registered to make sure the safe does not open to complete testing process

OPENING & CLOSING SAFE WITH PERSONAL PIN CODES

OPEN:

1. On the key pad enter in either of your 3-8 digit pin codes and press and release either "A" or "B" to confirm.
2. Turn the handle/lock knob to the unlock position and pull the safe door open

NOTE

After entering pin, you have 5 seconds to turn the knob before the mechanism re-locks automatically

CLOSE:

To close safe, close door and turn knob to the lock position

LOCK OUT

When the wrong pin code is entered 3 consecutive times lock out mode will activate for 5 min; safe cannot be used during this time; please wait or open with emergency keys.

CHANGING PERSONAL PIN CODES

Follow steps in "PIN CODE REGISTRATION"

LOW BATTERY WARNING

After entering correct personal code and the green and red indicator lights are flashing this indicates that the batteries are low. Follow steps in "BATTERIES"

NOTE

Safe may still be opened in low battery state depending on battery voltage. If safe cannot be opened please use emergency key. All registered pin codes remain stored

MOUNTING INSTRUCTIONS

The safe may be mounted to a wall. Be aware of the load bearing. Failure to do so can result in personal injury and/or damage to property. Use appropriate tools when performing work and always use eye protection.

- Do not mount the safe without anchoring to the wall.
- Find the studs in the wall, at your desired location. Most studs are 16 inches or 24 inches apart.
- Check the wall for concealed wires or pipes.
- Measure the location of the pre-set drill holes; mark their exact position onto the wall ensuring that the studs or anything else behind will not interfere.
- Drill the appropriate size holes for the anchors you are using.
- Carefully press the anchor into the holes at this time.
- Mount the safe by running screws from inside of the safe and securing to anchors; ensure the safe is mounted securely.

CARE AND MAINTENANCE

- Keep liquids away from the control panel. Spills on the control panel will cause damage and possibly electric shock.
- Secure safe in a proper area to prevent from falling and causing damage or injury.
- DO NOT disassemble the product. For all repairs, contact BARSKA Customer Service.
- DO NOT use chemicals or cleaning agents to clean the safe.
- DO NOT over stuff the contents of the safe, it can damage the motor mechanism or the contents
- DO NOT place emergency keys inside of safe

Note: All information, feature, and specification displayed herein are based on the data available at the time of publishing, thus they are subject to change without notice. All product pictures displayed herein are for illustration purposes only. The actual product may vary due to different circumstances.



1 YEAR LIMITED WARRANTY

SAFE/LOCK BOX

BARSKA warrants this new safe/lock box to be free of defects in material and/ or workmanship under normal use for a period of twelve (12) months from the date product is purchased. This limited warranty is delimited to repair or replacement only. This warranty does not cover damage caused by improper installation or maintenance. BARSKA disclaims all liability for incidental or consequential damages resulting from misuse, abuse, accident (such as dropping), fire, flood, service or repairs other than those performed by BARSKA, acts of nature, or arising out of any breach of this warranty. Altering the product under any circumstances will automatically void the warranty.

For service under this limited warranty, please have available the proof of purchase and the purchase date and location as well as a detailed description of the problem. This warranty is not transferable and only applies to the original purchaser with a proof of purchase from BARSKA or from an authorized dealer. This warranty applies only to products purchased within the United States, excluding Alaska, the Hawaiian Islands and all U.S. territories in the Caribbean and the Pacific.

BARSKA will examine and go through troubleshooting procedures, product repair or replacement of defective part(s) or units with new part(s) or provide a new unit, if necessary, during the warranty period. Reasonable shipping/handling charges may apply and are based on Barska sole discretion. Purchaser shall be required to prepay Shipping/handling charges with a check or money order to BARSKA at time product is returned. The Return Merchandise Authorization Number (RMA#) and shipping/handling charge MUST be obtained from BARSKA in advance of return. BARSKA shall not be liable for damages or loss occurring during shipping. Please visit via www.barska.com or call 909.445.8168 to obtain the RMA#, Shipping/handling amount, and for more information.

BARSKA reserves the right to modify or discontinue, without prior notice to the purchaser, any model or style of the product. BARSKA will determine, at its sole discretion, whether a product will be repaired or replaced. BARSKA reserves the right to discontinue or change any feature of its products at any time. If an exact replacement or product is not available, BARSKA reserves the right to provide a part or product that matches as closely as possible.

LIMITATION OF REMEDIES

BARSKA disclaims any warranties, express or implied, whether of merchantability or fitness for a particular use, except as expressly set forth herein. The sole obligation of BARSKA under this limited warranty shall be to repair or replace the covered product, in accordance with the terms set forth herein. BARSKA expressly disclaims any lost profits, general, special, indirect or consequential damages which may result from breach of any warranty, or arising out of the use or inability to use any BARSKA product. Any warranties which are implied and which cannot be disclaimed shall be limited in duration to a term of one year from the date of original retail purchase.

Some states do not allow the exclusion or limitation of incidental or consequential damages or limitation on how long an implied warranty lasts, so the above limitations and exclusions may not apply to you.

BARSKA
855 Towne Center Drive, Pomona, CA 91767