



# User's Manual for Keypad Fireproof Jewelry Safe

Read all instructions before using this safe




## WARNING

- For security purposes, change the factory default code as soon as possible. Factory default code is 123456.
- Test registered pin code a few times before closing the safe door.
- Avoid leaving door open and unattended; it will allow unauthorized individuals to reprogram the safe, gaining full access to the safe and its contents.
- Do NOT store combustible materials in this unit.
- In the event of a fire, we recommend caution when opening the safe. If you feel unsure about opening the safe because of the contents stored, contact your local fire department for assistance.
- Test the emergency keys and store them in a secure place; NOT inside of the safe.
- Test and make sure the safe works properly before mounting.
- Mount the safe before use, the safe may tip forward if not properly mounted.
- Keep children away from safe; they should not play with or around the safe at anytime. Children at play could accidentally get locked inside the safe or accidentally pull on the safe door causing safe to tip over if not properly mounted.
- Failure to follow these warnings could result in serious injury or death.

NOTE: BARSKA is not responsible for any damage or lost contents in the safe due to moisture.

NOTE: BARSKA is not responsible if the safe and its contents gets lost or stolen.

## PARTS OF THE SAFE

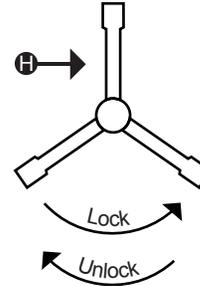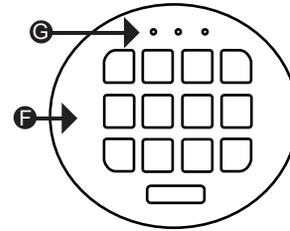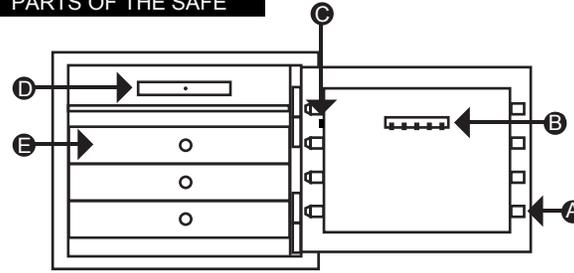

- A. Bolts
- B. Key Hook
- C. Reset Button
- D. Motion Sensor Light
- E. Jewelry Drawer

- F. Keypad and Keypad Cover
  - turn keypad counter clockwise to expose Battery Compartment and Emergency Key Access
- G. Indicator Lights
- H. Handle


\*Actual model may vary

## BATTERY & KEY ACCESS

\*To operate the safe, please install one 9V Alkaline battery (not included).

Push down on button located under the key pad and turn keypad cover counter clockwise.

DO NOT pull on the wires or touch the electronic components.

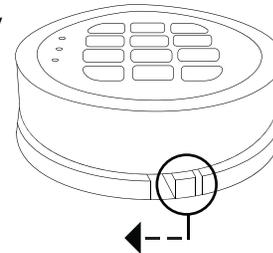

### Install Battery


Insert one new 9V alkaline battery into the battery compartment and restore keypad cover.

### Key Access

Insert access key into key slot and turn clockwise to open safe.

## MOTION SENSOR LIGHT

1. Motion Sensor Light has Velcro and magnet bar at rear, so it can attach on the interior carpeted or metal surface of the safe. Before you start to use the safe, please remove the light from the safe and install with 4 AAA batteries (not included).

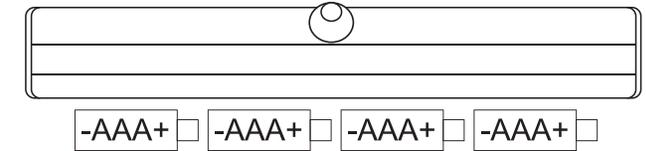

2. Motion Sensor Light should be automatically activated when the safe door is opened each time. If not, please wave your hand to activate the light. Light should turn off within a delay time after the safe door is closed.

## PIN CODE REGISTRATION

Safe retains 1 pin code (3 to 8 digits) Safe Factory Default PIN Code :123456

### Changing PIN Code

1. Insert original PIN code (for 1st time use, the original PIN code is default PIN code) and press "#". Then, the green light will turn on.
2. During the duration of green light on, press "\*" and then the yellow light will turn on as well. You can change to your desired PIN code now.

NOTE: If you don't take any action after 8 seconds, the safe will be back to standby mode.

3. Enter your desired PIN code and press "\*\*". You will hear two beeps and the yellow light will turn off. This means you have registered your PIN code successfully.

NOTE: If you hear 4 beeps, it means you didn't register your PIN code successfully. Please, repeat the above steps again.

## OPENING AND CLOSING SAFE WITH PIN CODE

**WARNING:** Safe will lock user out for 15 minutes after 3 consecutive incorrect password attempts. Leave Batteries in the safe and wait 15 min for safe functions to return. Batteries **MUST REMAIN** in safe.

### Open

1. Enter the registered PIN Code and press “ # ” to confirm.
2. When the green light is on, turn the handle clockwise to the unlocked position and pull safe door open.

### Close

Close the safe door and turn the handle to the locked position.

## RESET TO FACTORY DEFAULT MODE LOCK OUT MODE

Press hold the reset button until one beep and yellow light turns on.

The safe is in factory default mode after reset; Factory PIN Code: 123456.

## LOCK OUT MODE

After 3 consecutive incorrect PIN Code attempts, safe will be in lock-out mode with beeping sound for 20 seconds. You can enter the correct PIN Code after the lock-out mode.

## LOW BATTERY WARNING

If a red light turns on while accessing and using the safe, this indicates that the batteries are low, please replace battery as soon as possible.

## MOUNTING INSTRUCTIONS

The safe may be mounted down to the floor. Beware of the load bearing. Failure to do so can result in personal injury and/or damage to property. Use appropriate tools when performing work and always use eye protection.

### Floor Mounting

- Use proper drill tools depending on the type of floor you are mounting the safe (wood, tile, concrete).
- Measure the location of the pre-set drill holes; mark their exact position onto the floor.
- Drill the appropriate size holes for the anchors you are using.
- Carefully press the anchors into the holes at this time.
- Mount the safe by running screws from the inside of the safe and securing to anchors; ensure the safe is mounted securely.

## CARE AND MAINTENANCE

- Keep liquids away from the keypad. Spills on the keypad will cause damage and possibly electric shock.
- Secure safe in a proper area to prevent from falling and causing damage or injury.
- DO NOT disassemble the product. For all repairs and maintenance, contact BARSKA Customer Service 888.666.6769 for technical support.
- DO NOT use chemicals or cleaning agents.

Note: All information, feature, and specification displayed herein are based on the data available at the time of publishing, thus they are subject to change without notice. All product pictures displayed herein are for illustration purposes only. The actual product may vary due to different circumstances



## 1 YEAR LIMITED WARRANTY

### SAFE/LOCK BOX

BARSKA warrants this new safe/lock box to be free of defects in material and/ or workmanship under normal use for a period of twelve (12) months from the date product is purchased. This limited warranty is delimited to repair or replacement only. This warranty does not cover damage caused by improper installation or maintenance. BARSKA disclaims all liability for incidental or consequential damages resulting from misuse, abuse, accident (such as dropping), fire, flood, service or repairs other than those performed by BARSKA, acts of nature, or arising out of any breach of this warranty. Altering the product under any circumstances will automatically void the warranty.

For service under this limited warranty, please have available the proof of purchase and the purchase date and location as well as a detailed description of the problem. This warranty is not transferable and only applies to the original purchaser with a proof of purchase from BARSKA or from an authorized dealer. This warranty applies only to products purchased within the United States, excluding Alaska, the Hawaiian Islands and all U.S. territories in the Caribbean and the Pacific.

BARSKA will examine and go through troubleshooting procedures, product repair or replacement of defective part(s) or units with new part(s) or provide a new unit, if necessary, during the warranty period. Reasonable shipping/handling charges may apply and are based on Barska sole discretion. Purchaser shall be required to prepay Shipping/handling charges with a check or money order to BARSKA at time product is returned. The Return Merchandise Authorization Number (RMA#) and shipping/handling charge **MUST** be obtained from BARSKA in advance of return. BARSKA shall not be liable for damages or loss occurring during shipping. Please visit via [www.barska.com](http://www.barska.com) or call 909.445.8168 to obtain the RMA#, Shipping/handling amount, and for more information.

BARSKA reserves the right to modify or discontinue, without prior notice to the purchaser, any model or style of the product. BARSKA will determine, at its sole discretion, whether a product will be repaired or replaced. BARSKA reserves the right to discontinue or change any feature of its products at any time. If an exact replacement or product is not available, BARSKA reserves the right to provide a part or product that matches as closely as possible.

### LIMITATION OF REMEDIES

BARSKA disclaims any warranties, express or implied, whether of merchantability or fitness for a particular use, except as expressly set forth herein. The sole obligation of BARSKA under this limited warranty shall be to repair or replace the covered product, in accordance with the terms set forth herein. BARSKA expressly disclaims any lost profits, general, special, indirect or consequential damages which may result from breach of any warranty, or arising out of the use or inability to use any BARSKA product. Any warranties which are implied and which cannot be disclaimed shall be limited in duration to a term of one year from the date of original retail purchase.

Some states do not allow the exclusion or limitation of incidental or consequential damages or limitation on how long an implied warranty lasts, so the above limitations and exclusions may not apply to you.

BARSKA  
855 Towne Center Drive, Pomona, CA 91767