



# User's Manual For Digital Key Cabinet


Read all instructions before using This Key Cabinet

## WARNING

- For security purpose, change the factory default code as soon as possible. **Please remember the Master code you set.** Factory default codes: default User code: 1234 and default Master code: 4321.
- \*\* Please remember the Master code you set. The Master code should be held by the owner of the key Cabinet or authorized people.**
- \*\*Master code can also unlock the key Cabinet, after using Master code to unlock, the User code will be reset to User default code: 1234**
- Test registered User code before closing the key Cabinet door.
- Store emergency key securely
- Avoid leaving door open and unattended.
- Test and make sure the key Cabinet works properly before mounting.
- Mount the key Cabinet before use, the key Cabinet may tip forward if not properly mounted.
- Keep children away from key Cabinet; they should not play with or around the key Cabinet at any time. Children at play could accidentally pull on the key Cabinet door causing key Cabinet to tip over if not properly mounted.
- Failure to follow these warnings could result in serious injury or death.

NOTE: BARSKA is not responsible if the key Cabinet or its contents gets lost or stolen.


## Parts

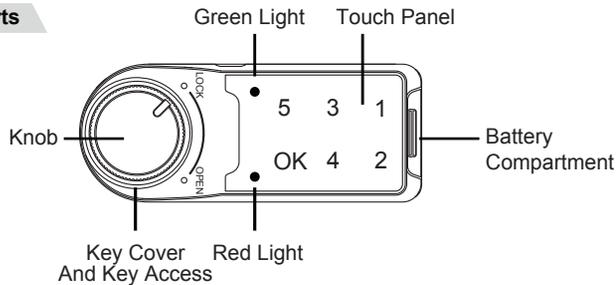


## Battery

Battery type: CR2032 (not included)

### Inserting the battery

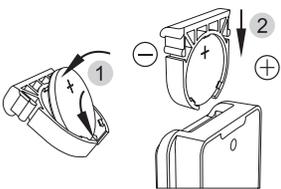


### Removing the battery

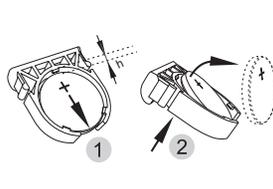

## Key Access

1. To expose the key access, use pin to push the hold and gently lift off the key cover
2. Use emergency key and insert into key hole, turn key

Side View Of Knob

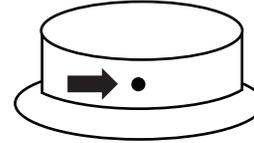

## Unlock and Lock Key Cabinet

### Unlock Key Cabinet Door with User Code

Input the User Code and press "OK". The green unlock light will turn on with 1 long beep. Turn knob clockwise to open the key Cabinet. \* Input the wrong User Code will have 3 short beeps and green unlock light flash, If 4 wrong codes are entered consecutively, the keypad will shut down for 60 seconds and the alarm will keep on.

### Lock Key Cabinet Door

Close door and turn knob counter-clockwise to lock position.

## Change the Master Code and User Code

**\*\*Master Code and User Code can not use the same number**

### Change the Master Code

#### Default Master Code: 4321

1. With key Cabinet door open, input the current Master Code and press "OK" and the green light will turn on with 1 long beep
2. Within green light on, press and hold "OK" button over 2 seconds. The green light will flash
3. Input the desired new code (4-15 digits) and then press "OK" to confirm
4. 1 long beep will be heard, new code is set successfully

### Unsuccessful Registration

- 4 quick beeps will be heard

### Change the User Code

#### Default User Code: 1234

1. With key Cabinet door open, input the current User Code and press "OK" and the green unlock light will turn on with 1 long beep
2. Within green light on, press and hold "OK" button over 2 seconds. The green light will flash
3. Input the desired new User code (4-15 digits) and then press "OK" to confirmed
4. 1 long beep will be heard, new code is set successfully.

## Unsuccessful Registration

- 4 quick beeps will be heard

## Anti-Beep Function

Anti-Beep Function, it could effectively avoid code spying while others are surrounding. You can add random number before and after your code up to 15 digits.

### Turn on Anti-Beep Function

Total can enter up to 15 digits

- Input the Master code and press "OK"
- Green light will turn on with 1 long beep
- Within green light on, press and hold "OK" over 2 seconds. The green light will flash, press "OK" again
- Input "4 2" and press "OK", will hear 1 long beep

After set up anti-beep function successfully, user can enter any number before or after the User Code and Master Code to avoid someone know the Code when operating. For example: User Code is 22335, you can input 12322335443 and press "OK" to unlock the key Cabinet.

### Turn off Anti-Beep Function

- Input the Master code and press "OK"
- Green light will turn on with 1 long beep
- Within green light on, press and hold "OK" over 2 seconds. The green light will flash, press "OK" again
- Input "4 1" and press "OK", will hear 1 long beep

## Low Battery Warning

When key Cabinet is low on battery, low battery light will light up. Please change battery, after changing the battery the user pin code and master code will not be lost.



## 1 YEAR LIMITED WARRANTY

### SAFE/LOCK BOX

BARSKA warrants this new safe/lock box to be free of defects in material and/ or workmanship under normal use for a period of twelve (12) months from the date product is purchased. This limited warranty is delimited to repair or replacement only. This warranty does not cover damage caused by improper installation or maintenance. BARSKA disclaims all liability for incidental or consequential damages resulting from misuse, abuse, accident (such as dropping), fire, flood, service or repairs other than those performed by BARSKA, acts of nature, or arising out of any breach of this warranty. Altering the product under any circumstances will automatically void the warranty.

For service under this limited warranty, please have available the proof of purchase and the purchase date and location as well as a detailed description of the problem. This warranty is not transferable and only applies to the original purchaser with a proof of purchase from BARSKA or from an authorized dealer. This warranty applies only to products purchased within the United States, excluding Alaska, the Hawaiian Islands and all U.S. territories in the Caribbean and the Pacific.

BARSKA will examine and go through troubleshooting procedures, product repair or replacement of defective part(s) or units with new part(s) or provide a new unit, if necessary, during the warranty period. Reasonable shipping/handling charges may apply and are based on Barska sole discretion. Purchaser shall be required to prepay Shipping/handling charges with a check or money order to BARSKA at time product is returned. The Return Merchandise Authorization Number (RMA#) and shipping/handling charge MUST be obtained from BARSKA in advance of return. BARSKA shall not be liable for damages or loss occurring during shipping. Please visit via [www.barska.com](http://www.barska.com) or call 909.445.8168 to obtain the RMA#, Shipping/handling amount, and for more information.

BARSKA reserves the right to modify or discontinue, without prior notice to the purchaser, any model or style of the product. BARSKA will determine, at its sole discretion, whether a product will be repaired or replaced. BARSKA reserves the right to discontinue or change any feature of its products at any time. If an exact replacement or product is not available, BARSKA reserves the right to provide a part or product that matches as closely as possible.

#### LIMITATION OF REMEDIES

BARSKA disclaims any warranties, express or implied, whether of merchantability or fitness for a particular use, except as expressly set forth herein. The sole obligation of BARSKA under this limited warranty shall be to repair or replace the covered product, in accordance with the terms set forth herein. BARSKA expressly disclaims any lost profits, general, special, indirect or consequential damages which may result from breach of any warranty, or arising out of the use or inability to use any BARSKA product. Any warranties which are implied and which cannot be disclaimed shall be limited in duration to a term of one year from the date of original retail purchase.

Some states do not allow the exclusion or limitation of incidental or consequential damages or limitation on how long an implied warranty lasts, so the above limitations and exclusions may not apply to you.

BARSKA  
855 Towne Center Drive, Pomona, CA 91767

Note: All information, feature, and specification displayed herein are based on the data available at the time of publishing, thus they are subject to change without notice. All product pictures displayed herein are for illustration purposes only. The actual product may vary due to different circumstances